

ARIES



FOGLIO ISTRUZIONI

INSTRUCTIONS DATASHEET

- Prima di procedere all'installazione leggere attentamente queste istruzioni e conservarle per la manutenzione.
- Montaggio ed avviamento devono essere eseguiti solo da personale specializzato
- L'apparecchio va installato in conformità alle leggi nazionali in vigore.
- In funzione del progetto di impianto, Tecnoilluminazione fornisce gli alimentatori per LED più idonei, lo schema elettrico con l'evidenza della tipologia di cavi, la colorazione delle polarità e i tipi di collegamento

- Before installation read these instructions carefully and keep them for maintenance.
- Installation and commissioning must be performed by qualified personnel
- The device should be installed in accordance with national laws in force.
- According to the draft system, Tecnoilluminazione provides the most suitable LED ballast, the circuit diagram with the evidence of the type of cable, the color of the polarity and connection types.


ATTENZIONE!

- Disinserire la tensione di rete durante il collegamento e scollegamento per non danneggiare i LED
- Non gettare le apparecchiature elettriche tra i rifiuti domestici



WARNING!

- Switch off the mains when connecting and disconnecting to avoid damaging the LEDs
- Do not dispose electric tools together with household waste

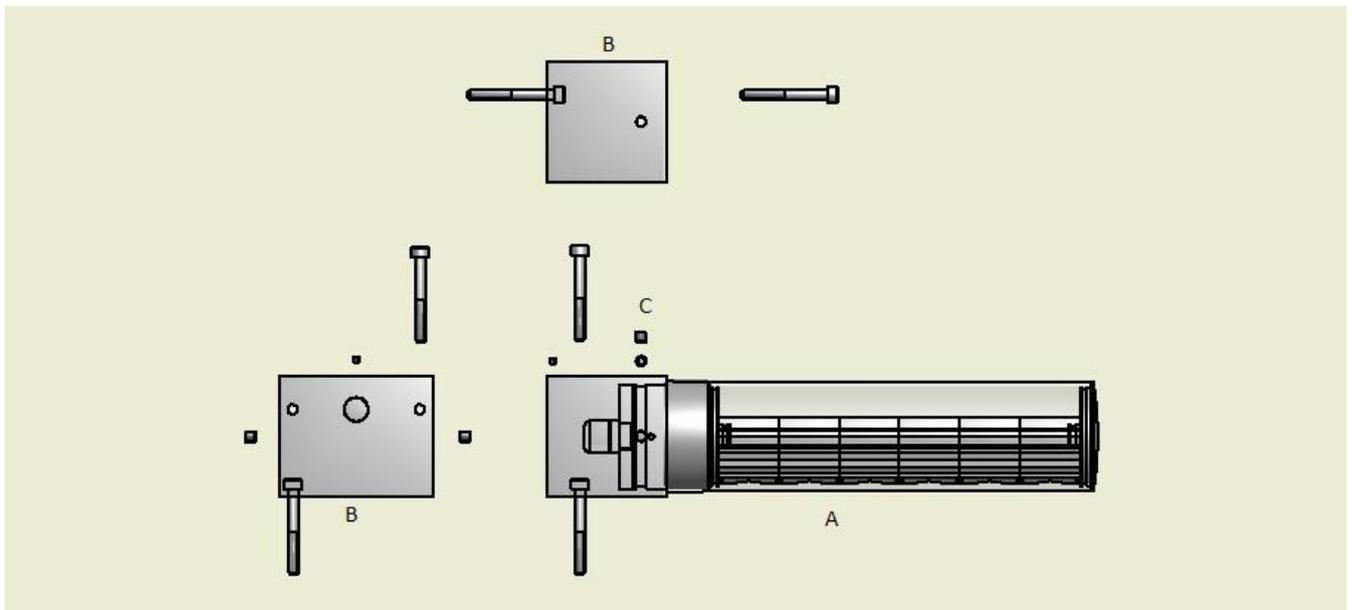

1. Disinserire la tensione di rete
2. Assicurarsi che la tensione di rete e la potenza del trasformatore siano compatibili con l'alimentatore e la potenza assorbita.
3. Posizionare il modulo di supporto (B) nella modalità desiderata (appoggio, parete, soffitto) e fissare l'unità con le viti fornite.
4. Per le versioni con l'alimentatore per LED separato dal corpo lampada:
 - a) collegare il secondario dell'alimentatore per LED al corpo lampada mantenendo le polarità corrette.
 - b) collegare il primario dell'alimentatore per LED. Se in corrente continua mantenere le polarità corrette.
5. Per le versioni con l'alimentatore per LED a bordo: collegare il secondario dell'alimentatore al conduttore del corpo lampada mantenendo le polarità corrette se in corrente continua.
6. Fissare il corpo lampada (A) all'unità di supporto (B) con le viti senza testa (grani) fornite (C)
7. Regolazione del corpo lampada: per orientare il gruppo LED, allentare leggermente la/le viti senza testa (grani) (C) poste sulla faccia del modulo di sostegno (B)

1. Disconnect the power supply
2. Make sure the voltage and power transformer are compatible with the power supply and power consumption.
3. Place the support module (B) in the desired mode (floor, wall, ceiling) and secure the unit with the screws provided.
4. For versions with the LED ballast separate from the lamp unit:
 - a) connect the secondary of the LED ballast to the lamp maintaining the correct polarity.
 - b) connect the primary of LED ballast. Be sure to maintain the correct polarity in case of direct current (DC).
5. For versions with the LED ballast on-board: connect the secondary of the power supply to the conductor of the lamp while maintaining the correct polarity if direct current (DC).
6. Secure the lamp (A) to the support unit (B) through the screw provided (C).
7. Adjust the lamp: to guide all LED, slightly loosen set screws (grain) (C) on the face of the support unit (B)

Per la sostituzione del LED contattare l'azienda Tecnoilluminazione

To replace the LED contact Tecnoilluminazione Company.